

GE
Intelligent Platforms

Programmable Control Products

PACSystems* Controllers Battery and Energy Pack Manual

GFK-2741C
March 2015



Warnings, Cautions, and Notes as Used in this Publication



Warning

Warning notices are used in this publication to emphasize that hazardous voltages, currents, temperatures, or other conditions that could cause personal injury exist in this equipment or may be associated with its use.

In situations where inattention could cause either personal injury or damage to equipment, a Warning notice is used.



Caution

Caution notices are used where equipment might be damaged if care is not taken.

Note: Notes merely call attention to information that is especially significant to understanding and operating the equipment.

These instructions do not purport to cover all details or variations in equipment, nor to provide for every possible contingency to be met during installation, operation, and maintenance. The information is supplied for informational purposes only, and GE makes no warranty as to the accuracy of the information included herein. Changes, modifications, and/or improvements to equipment and specifications are made periodically and these changes may or may not be reflected herein. It is understood that GE may make changes, modifications, or improvements to the equipment referenced herein or to the document itself at any time. This document is intended for trained personnel familiar with the GE products referenced herein.

GE may have patents or pending patent applications covering subject matter in this document. The furnishing of this document does not provide any license whatsoever to any of these patents.

GE PROVIDES THE FOLLOWING DOCUMENT AND THE INFORMATION INCLUDED THEREIN AS-IS AND WITHOUT WARRANTY OF ANY KIND, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED STATUTORY WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE.

* indicates a trademark of GE Intelligent Platforms, Inc. and/or its affiliates. All other trademarks are the property of their respective owners.

©Copyright 2013-2015 General Electric Company.
All Rights Reserved

If you purchased this product through an Authorized Channel Partner, please contact the seller directly.

Contact Information

If you purchased this product through an Authorized Channel Partner, please contact the seller directly.

General Contact Information

Online technical support and GlobalCare	http://support.ge-ip.com
Additional information	http://www.ge-ip.com/
Solution Provider	solutionprovider.ip@ge.com

Technical Support

If you have technical problems that cannot be resolved with the information in this guide, please contact us by telephone or email, or on the web at <http://support.ge-ip.com>

Americas

Online Technical Support	www.ge-ip.com/support
Phone	1-800-433-2682
International Americas Direct Dial	1-780-420-2010 (if toll free 800 option is unavailable)
Technical Support Email	support.ip@ge.com
Customer Care Email	customercare.ip@ge.com
Primary language of support	English

Europe, the Middle East, and Africa

Online Technical Support	www.ge-ip.com/support
Phone	+800-1-433-2682
EMEA Direct Dial	+420-23-901-5850 (if toll free 800 option is unavailable or dialing from a mobile telephone)
Technical Support Email	support.emea.ip@ge.com
Customer Care Email	customercare.emea.ip@ge.com
Primary languages of support	English, French, German, Italian, Czech, Spanish

Asia Pacific

Online Technical Support	www.ge-ip.com/support
Phone	+86-400-820-8208 +86-21-3217-4826 (India, Indonesia, and Pakistan)
Technical Support Email	support.cn.ip@ge.com (China) support.jp.ip@ge.com (Japan) support.in.ip@ge.com (remaining Asia customers)
Customer Care Email	customercare.apo.ip@ge.com customercare.cn.ip@ge.com (China)

1. Introduction	1
2. Batteries.....	3
2.1 Battery Selection	3
2.1.1 Conventional Coin-Cell Lithium Battery (IC698ACC701A, IC698ACC701B).....	3
2.1.2 Conventional Auxiliary Battery (IC693ACC302)	3
2.1.3 Smart Coin-Cell Lithium Battery (IC698ACC701, revision C & later)	3
2.1.4 Smart Auxiliary Lithium Battery (IC695ACC302)	3
2.1.5 Rechargeable Battery (IC690RBT001)	3
2.2 Battery Compatibility and Memory Retention Time in Days at 20°C.....	4
2.3 CPU Support of Low Battery Detection	5
2.4 Smart Batteries	6
2.4.1 Smart Battery Operation	6
2.4.2 IC695ACC302.....	7
2.4.2.1 Specifications.....	7
2.4.2.2 Battery Mounting	7
2.4.3 IC698ACC701C (& later revisions)	8
2.4.3.1 Specifications.....	8
2.5 Rechargeable Batteries	9
2.5.1 IC690RBT001	9
2.5.1.1 Specifications.....	9
2.5.1.2 Nominal Battery Life	9
2.5.1.3 Battery Mounting	9
2.5.1.4 CPU Battery Low Indication	10
2.5.1.5 Diagnostics	10
2.5.2 IC690CRG001	10
2.5.2.1 Specifications.....	10
2.5.2.2 Operation	10
2.5.2.3 Indicators	10
2.5.2.4 Charger Connection	11
2.6 Legacy Batteries.....	11
2.6.1 IC698ACC701A and IC698ACC701B.....	11
2.6.1.1 Specifications.....	11
2.6.1.2 CPU Battery Low Indication	11
2.6.2 IC693ACC302.....	12
2.6.2.1 Specifications.....	12
2.6.2.2 Battery Mounting	12
2.6.2.3 CPU Battery Low Indication	12
2.6.2.4 Diagnostics	12
2.7 Battery Installation Instructions.....	13
2.7.1 Installation in Hazardous Areas	13
2.7.2 Preparation and Mounting.....	13
2.7.3 Installation and Replacement	13
2.8 Date Code & Shelf Life.....	15
2.9 Safe Handling & Disposal	15
2.10 Agency Certifications	16
2.10.1 Batteries.....	16
2.10.2 Charger: IC690CRG001	16

Contents

3. Energy Packs	17
3.1 Energy Pack Compatibility	17
3.2 PACSystems RXi Energy Pack (ICRXIACCEPK01A)	17
3.2.1 Specifications	17
3.2.2 General Installation Environments	18
3.2.3 Industrial Environment Installations	18
3.2.4 Hardware Installation	18
3.2.4.1 Mounting the Energy Pack on a DIN Rail	18
3.2.4.2 Mounting the Energy Pack Directly on a Panel	19
3.2.5 Cable Connections	20
3.2.5.1 Connecting Input Power to the Energy Pack	20
3.2.5.2 Connecting the Energy Pack to the Controller	21
3.2.6 Grounding	21
3.2.7 Power-up	22
3.2.8 LED Indications	22
3.2.8.1 LED Indications: Special Cases	22
3.2.9 Backup Operation	22
3.2.10 Service and Maintenance	23
3.2.10.1 Replacing the Cap Pack Module	23
3.2.10.2 Firmware Updates	23
3.2.11 Diagnostics	24
3.2.11.1 System Version Information	24
3.2.11.2 Status Information	24
3.2.11.3 Energy Pack LEDs	24
3.2.12 Agency Certifications	24
3.3 PACSystems RX3i Energy Pack (IC695ACC400)	24
3.4 PACSystems RX3i Energy Pack (IC695ACC402)	24
4. Related Documents	25

1. Introduction

Many PACSystems CPUs require a battery or energy pack to back up volatile memory. This memory is separate from the non-volatile flash memory. This manual covers the technologies used to back up volatile memory on PACSystems RX3i and RX7i CPUs, and RXi Controllers. Other GE Intelligent Platforms manuals and documents discuss memory retention technologies in passing. However, when it comes to energy sources used by PACSystems to back up volatile memory, this manual should be considered the definitive source.

Other methods of retaining volatile memory, such as real-time clock batteries, are ***not*** covered by this manual. Note, however, that RX7i CPUs use the same battery mechanism to back up the calendar clock and user memory.

This manual includes:

- A battery selection guide, information on battery life and usage, disposal instructions, and agency compliance
- RXi Energy Pack specifications, installation, operation, and service and maintenance

2. Batteries

2.1 Battery Selection

2.1.1 Conventional Coin-Cell Lithium Battery (IC698ACC701A, IC698ACC701B)

The conventional coin-cell lithium batteries are relatively small and have the advantage of fitting inside the battery compartment of compatible CPUs. The disadvantages are limited memory retention time, limited CPU compatibility, and no support for low battery detection.

2.1.2 Conventional Auxiliary Battery (IC693ACC302)

The conventional auxiliary battery should be used where maximum memory retention time is desired. It is compatible with all PACSystems CPUs requiring a battery for memory retention and no other battery has a better memory retention time. The disadvantages are that external mounting is required due to battery size and it does not support low battery detection.

2.1.3 Smart Coin-Cell Lithium Battery (IC698ACC701, revision C & later)

The smart coin-cell lithium battery is an improvement on the conventional coin-cell lithium battery and adds reliable low battery detection for compatible CPUs at the expense of reduced memory retention time. The improved battery is slightly larger, but is still able to fit into the battery compartment of compatible CPUs. The disadvantages are reduced memory retention time as compared to conventional batteries and limited CPU compatibility. For CPUs that do not support low battery detection, the conventional coin-cell lithium battery may be a better choice as it will provide longer retention time.

2.1.4 Smart Auxiliary Lithium Battery (IC695ACC302)

The smart auxiliary lithium battery is an improvement on the conventional auxiliary lithium battery and adds reliable low battery detection for compatible CPUs at the expense of a slight reduction in memory retention time. The disadvantage is that external mounting is required due to battery size. For CPUs that do not support low battery detection, the conventional auxiliary lithium battery may be a better choice as it will provide longer retention time.

2.1.5 Rechargeable Battery (IC690RBT001)

The rechargeable battery is designed for customer applications that use memory retention on a cyclical basis. Customers who shut down equipment and rely on battery backed memory on a daily or weekly basis should consider the use of this battery. It is compatible with all PACSystems CPUs requiring a battery for memory retention and is slightly larger than the auxiliary lithium batteries. The disadvantages are that external mounting is required due to battery and charger size, no support for low battery detection, limited temperature range (0°C – 50°C), and inability to charge in a hazardous location.

2.2 Battery Compatibility and Memory Retention Time in Days at 20°C

CPU ¹	IC698ACC701A IC698ACC701B	IC698ACC701C & later revisions ²	IC695ACC302 ²	IC693ACC302	IC690RBT001 ³
Type	Coin-Cell	Smart Coin-Cell	Smart Auxiliary	Auxiliary	Rechargeable
IC695CPU310 ⁴	40	33 (18+15)	200 (185+15)	200	90
IC695CPU315	-	-	23 (8+15)	30	14
IC695CPU320-Ex and earlier	-	-	23 ⁵	30	14
IC695CPU320-Fx and later	-	-	23 (8+15)	30	14
IC695CRU320-Bx and earlier	-	-	23 ⁵	30	14
IC695CRU320-Cx and later	-	-	23 (8+15)	30	14
IC698CPE010 ⁴	40	30 (15+15)	175 (160+15)	200	90
IC698CPE020 ⁴	40	30 (15+15)	175 (160+15)	200	90
IC698CRE020 ⁴	40	30 (15+15)	175 (160+15)	200	90
IC698CPE030-Hx and earlier	-	-	23 ⁵	30	14
IC698CPE030-Jx and later	-	-	23 (8+15)	30	14
IC698CRE030-Gx and earlier	-	-	23 ⁵	30	14
IC698CRE030-Hx and later	-	-	23 (8+15)	30	14
IC698CPE040-Hx and earlier	-	-	23 ⁵	30	14
IC698CPE040-Jx and later	-	-	23 (8+15)	30	14
IC698CRE040-Gx and earlier	-	-	23 ⁵	30	14
IC698CRE040-Hx and later	-	-	23 (8+15)	30	14

¹ IC695CPE305, IC695CPE310 & IC695CPE330 do not appear in this table, as they rely on Energy Packs rather than batteries.

² Retention Time for smart batteries shows total retention time and the sum of expected good and low battery operation. Refer to *Battery Operation* for details.

³ For the rechargeable battery, the backup time indicated is based on each full charge.

⁴ Discontinued product as of March 2015

⁵ For CPUs that do not support low battery detection, only the total retention time is provided.

2.3 CPU Support of Low Battery Detection

For low battery detection to work reliably, a smart battery (IC695ACC302 and IC698ACC701 revision C or later) must be used with a CPU that supports low battery detection, such as the following:

- IC695CPU310⁴ all hardware and firmware versions
- IC695CPU315 all hardware and firmware versions
- IC695CPU320-Fx and later hardware revisions with firmware revision 6.02 or later
- IC695CRU320-Cx and later hardware revisions with firmware revision 6.02 or later
- IC698CPE010⁴ all hardware and firmware versions
- IC698CPE020⁴ all hardware and firmware versions
- IC698CRE020⁴ all hardware and firmware versions
- IC698CPE030-Jx and later hardware revisions with firmware revision 6.75 or later
- IC698CPE040-Jx and later hardware revisions with firmware revision 6.75 or later
- IC698CRE030-Hx and later hardware revisions with firmware revision 6.75 or later
- IC698CRE040-Hx and later hardware revisions with firmware revision 6.75 or later

The use of a non-smart battery or a CPU not on the above list will result in the low battery detection bits being unreliable.

Low/failed battery conditions are indicated by CPU LED operation and %S status bits. For details, refer to *Diagnostics* in the *PACSystems CPU Reference Manual*, GFK-2222.


2.4 Smart Batteries

2.4.1 Smart Battery Operation

The battery output voltage is > 2.5 V when the battery is operating in its good state. At the end of the battery good period, the battery output drops to <2.5 V for the battery low state. The period for the battery low state is 15 days for all CPU models. Once battery output voltage drops to <2.5V, compatible PACSystems CPUs detect this as a battery low condition; a Low Battery fault is logged in the Controller fault table and the red Battery LED on the CPU starts blinking.

Once the low battery state is active, the user has 15 days of accumulative battery backed energy left for CPU RAM retention during power loss. Since the low battery period may start while the PLC is powered down and faults cannot be logged in this state, the low battery fault date is unlikely to indicate the starting point of the 15 day count down. System power downs should not exceed 15 days as the battery voltage may drop to 0V, resulting in the loss of CPU RAM memory contents.

Consider the following example:

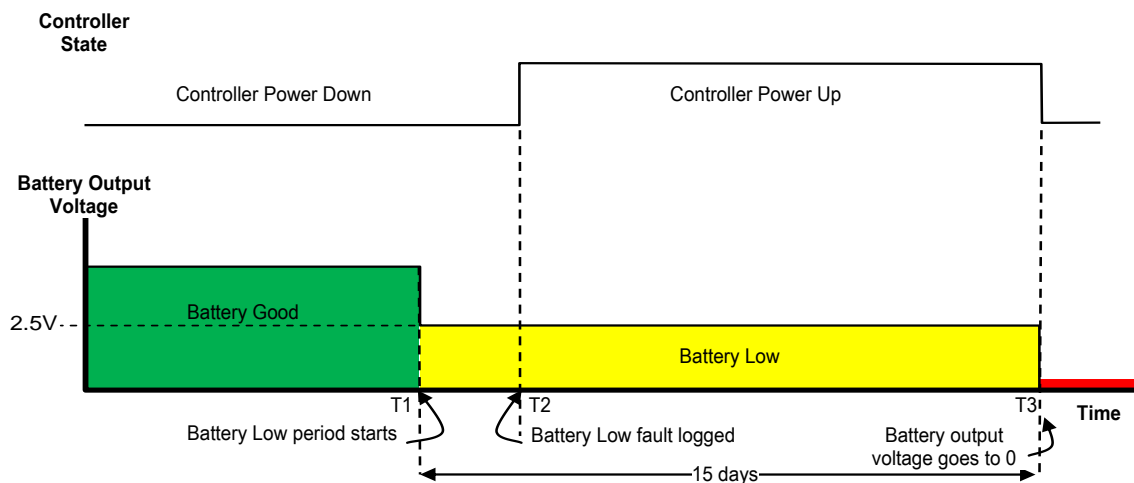

The Battery Low period of 15 days starts at Point T1, but the low battery fault is logged at Point T2, when the controller is powered ON. The user should be aware that the Low Battery fault timestamp does not indicate the start of the 15 day Battery Low period.

2.4.2 IC695ACC302


The IC695ACC302 Auxiliary Smart Battery Module is an enhanced version of IC693ACC302. In addition to providing an extended backup time for volatile memory on PACSystems CPUs compared to the standard memory backup battery (IC698ACC701), the smart battery module has a battery monitoring circuit that enables the user to detect the low battery state before it is completely drained. Once an IC695ACC302 Auxiliary Smart Battery Module is connected to a CPU model, it must be used with only that specific CPU model for the remainder of its life to insure proper *Low Battery* indication. IC695ACC302 Auxiliary Smart Battery Modules should be replaced every 2 years or once a *Low Battery* fault is logged in the CPU, whichever occurs first.

2.4.2.1 Specifications

Parameter	Specification
Battery capacity	15.0 Amp-hours
Lithium content	5.1 grams (3 cells @ 1.7 grams/cell)
Physical dimensions	5.713" long x 2.559" wide x 1.571" high (145.1 x 65.0 x 39.9 mm)
Weight	224 grams
Case material	Black, flame-retardant ABS plastic
Connection	2' (50mm) twisted red/black 22 AWG cable with female two-pin connector compatible with the battery connector on PAC Systems CPUs.
Operating temperature range	0 to +60°C
Nominal shelf life	7 years @ 20°C without the enabling adapter cable attached

2.4.2.2 Battery Mounting

With power removed from the equipment, drill four #29 (0.136") holes in the panel mounting surface, and tap for #8-32 threads, according to the hole pattern shown in the following figure. Use care to keep metal chips from falling into other equipment. Securely attach the Auxiliary Battery Module to the panel mounting surface using four #8-32 x ½" flat head machine screws.

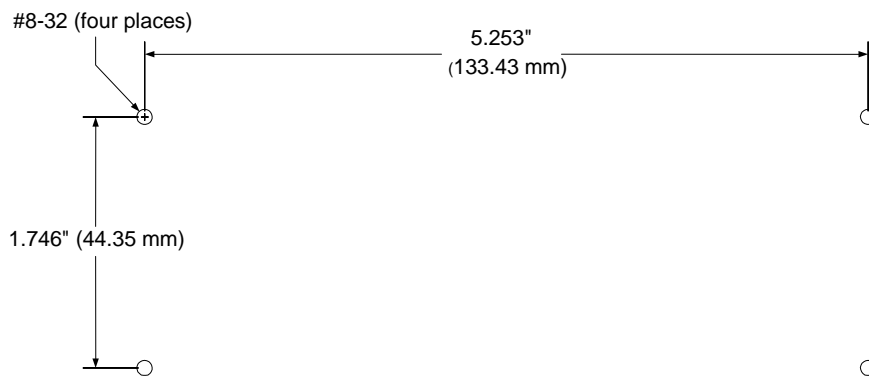

2.4.3 IC698ACC701C (& later revisions)

The IC698ACC701C smart coin cell battery pack is an enhanced version of the IC698ACC701B battery pack. In addition to providing volatile memory backup for PACSystems CPUs, the smart coin cell battery pack has a battery monitoring circuit that enables the user to detect the low battery state before it is completely drained. Once an IC698ACC701C smart coin cell battery pack is connected to a CPU model, it must be used with only that specific CPU model for the remainder of its life to insure proper *Low Battery* indication. IC698ACC701C smart coin cell battery packs should be replaced every 2 years or once a *Low Battery* fault is logged in the CPU, whichever occurs first.

2.4.3.1 Specifications

<i>Parameter</i>	<i>Specification</i>
Battery capacity	3.0 Amp-hours
Lithium content	0.87 grams (3 cells @0.29grams/cell)
Physical dimensions	3" long x 1.059" wide x 0.4822" high (76.2 x 26.92 x 12.25mm)
Weight	29.94 grams
Connection	2' (50mm) twisted red/black 22 AWG cable with female two-pin connector compatible with the battery connector on PAC Systems CPUs.
Operating temperature range	0 to +60°C
Nominal shelf life	5 years @ 20°C without the enabling adapter cable attached

2.5 Rechargeable Batteries

2.5.1 IC690RBT001

The IC690RBT001 Rechargeable Battery provides an extended backup time for volatile memory on PACSystems CPUs compared to that of the standard memory backup battery (IC698ACC701).

2.5.1.1 Specifications

Parameter	Specification
Battery capacity	7.0 Amp-hours
Battery construction	3-cell, nickel-metal hydride
Lithium content	None
Physical dimensions	6.902" long x 3.150" wide x 1.819" high (175.3 x 80.0 x 46.2 mm)
Case material	Black, flame-retardant ABS plastic
Connection	2' (50mm) twisted red/black 22 AWG cable with female two-pin connector compatible with the battery connector on PACSystems CPUs.
Operating temperature range	0 to +50°C
Nominal shelf life	3 years@ 20°C
Operating life @ 50°C	12 months or 60 charge-discharge cycles
Compatible Charger	IC690CRG001


2.5.1.2 Nominal Battery Life

The nominal battery life at 50°C is 12 months or 60 charge/discharge cycles. Battery life is negatively affected by higher temperatures, and can be significantly improved by operating closer to room temperature (25°C). When deciding where to mount the battery, consider how the mounting location will affect the battery temperature. For most industrial installations, mounting the battery below the PLC rack will result in a temperature closer to 25°C and will help improve battery life. Do not operate the battery at less than 0°C or greater than 50°C.

The battery will continue to operate after 12 months or 60 charge/discharge cycles, however the battery capacity will decline and the times listed in the *Battery Compatibility and Memory Retention Time in Days at 20°C* chart will no longer be valid.

2.5.1.3 Battery Mounting

With power removed from the equipment, drill four #29 (0.136") holes in the panel mounting surface, and tap for #8-32 threads, according to the hole pattern shown in the following figure. Use care to keep metal chips from falling into other equipment. Securely attach the rechargeable battery module to the panel mounting surface using four #8-32 x ½" flat head machine screws.

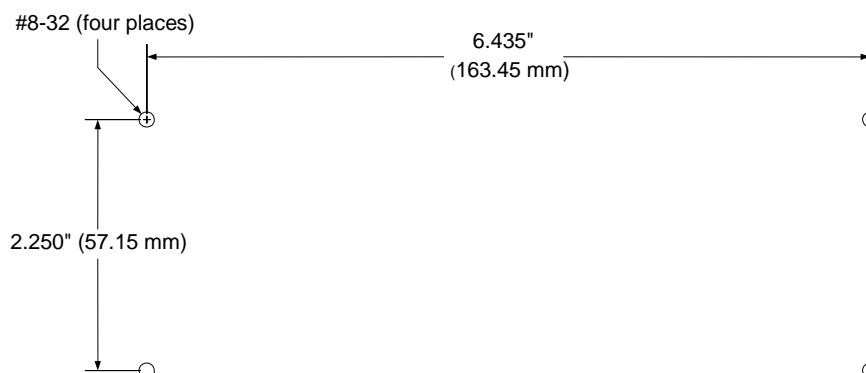

2.5.1.4 CPU Battery Low Indication

The rechargeable battery will not reliably provide the CPU with a battery low indication. User logic should not rely on any of the battery status bits when using this battery.

2.5.1.5 Diagnostics

This unit is not user-serviceable. The IC690RBT001 contains a self-resetting thermal protection device that disconnects the battery if the cell temperature exceeds 90°C.

2.5.2 IC690CRG001

The IC690CRG001 Battery Charger is intended for use only with the IC690RBT001 rechargeable battery.

2.5.2.1 Specifications

Parameter	Specification
Input Power	100–240Vac, 50–60Hz, 0.35A maximum
Maximum output power	8W
Physical dimensions	3.55" long x 1.77" wide x 1.26" high (90 x 45 x 32 mm)
Weight	115 grams
Operating Temperature range	0 to +60°C

2.5.2.2 Operation

Charging begins when a battery pack is connected to the charger. The LED is initially orange, and changes to red when the fast charge starts. When the cells are fully charged, the charger goes into top-off charge mode before switching to trickle charge mode. During the top-off charge, the LED is green with short, intermittent orange flashes. When the top-off charge is complete, the charger goes into trickle charge mode, and the LED color changes to green.

If the charger detects a fault, the charger will stop the fast charge current and switch to trickle charge mode. The LED will then indicate *error* by flickering green and red. The fault condition can be caused by the battery pack, wiring, or the charger.

If input power is turned off, the charger will reset. The charger starts a new charge cycle when the power is turned back on.

2.5.2.3 Indicators

LED	Mode
Orange	No battery / Initialization
Red	Fast charge
Green/Orange	Top-off charge
Green	Trickle charge (fully charged)
Red/Green	Error

2.5.2.4 Charger Connection



Warning

Explosion Hazard - Recharge battery only in a non-hazardous location. Do not connect or disconnect the battery charger unless the area is known to be non-hazardous. The IC690CRG001 battery charger is not certified for use in hazardous locations.

Insert the charging jack into the threaded connector on the side of the battery and hand-tighten the screw lock to secure it.

2.6 Legacy Batteries

2.6.1 IC698ACC701A and IC698ACC701B

The IC698ACC701B (and earlier revisions) coin cell battery pack is a simple battery pack that provides backup for volatile memory on PACSystems CPUs. The chemistry used in these batteries does not support the low-battery detection feature. Due to the limited capacity of this battery pack, it is not compatible with all PACSystems CPUs. Please refer to the *Battery Compatibility and Memory Retention Time in Days at 20°C* chart for CPU compatibility information.

2.6.1.1 Specifications

Parameter	Specification
Battery capacity	3.0 Amp-hours
Lithium (Li) content	0.87 grams (3 cells @ 0.29grams/cell)
Physical dimensions	3" long x 1.059" wide x 0.4822" high (76.2 x 26.92 x 12.25mm)
Weight	26.5 grams
Connection	2' (50mm) twisted red/black 22 AWG cable with female two-pin connector compatible with the battery connector on PAC Systems CPUs.
Operating temperature range	0 to +60°C
Nominal shelf life	5 years @ 20°C

2.6.1.2 CPU Battery Low Indication

The legacy batteries will not reliably provide the CPU with a battery low indication. User logic should not rely on any of the battery status bits when using these batteries.

2.6.2 IC693ACC302


The IC693ACC302 Auxiliary Battery Module provides an extended backup time for volatile memory on PACSystems CPUs compared to that of the standard memory backup battery (IC698ACC701).

2.6.2.1 Specifications

Parameter	Specification
Battery capacity	15.0 Amp-hours
Lithium content	5.1 grams (3 cells @ 1.7 grams/cell)
Physical dimensions	5.713" long x 2.559" wide x 1.571" high (145.1 x 65.0 x 39.9 mm)
Weight	232 grams
Case material	Black, flame-retardant ABS plastic
Connection	2' (50mm) twisted red/black 22 AWG cable with female two-pin connector compatible with the battery connector on PAC Systems CPUs.
Operating temperature range	0 to +60°C
Nominal shelf life	7 years @ 20°C

2.6.2.2 Battery Mounting

With power removed from the equipment, drill four #29 (0.136") holes in the panel mounting surface, and tap for #8-32 threads, according to the hole pattern shown in the following figure. Use care to keep metal chips from falling into other equipment. Securely attach the Auxiliary Battery Module to the panel mounting surface using four #8-32 x 1/2" flat head machine screws.

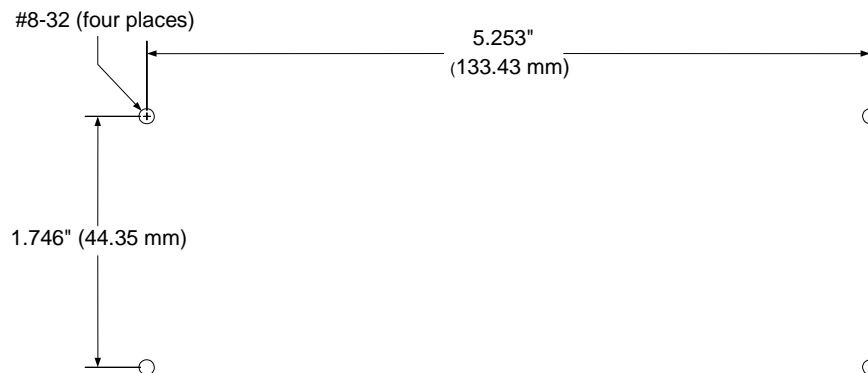

2.6.2.3 CPU Battery Low Indication

The IC693ACC302 Auxiliary Battery module will not reliably provide the CPU with a battery low indication. User logic should not rely on any of the battery status bits when using this battery.

2.6.2.4 Diagnostics

This unit is not user-serviceable. The unit has a built-in 1-Amp fuse that will open if the unit is subjected to a short circuit or severe overload condition. This fuse is sealed inside the battery pack and is not replaceable.

To test the unit if you suspect that the fuse has opened, turn off PLC power, unplug the battery unit, and carefully check the battery cable connector pins for presence of voltage with a volt meter. If voltage is present, the fuse is not open. If no voltage is present, the internal fuse has probably opened and the unit will have to be replaced. Only perform this check in a non-hazardous environment.

2.7 Battery Installation Instructions



Warning

Explosion Hazard - Do not add, remove, replace or recharge a battery unless the area is known to be non-hazardous.

2.7.1 Installation in Hazardous Areas

1. Install the CPU in a system that is located **outside** the hazardous area.
2. Apply power to the system and install the battery.
3. Power the system down.
4. With the battery still attached, remove the CPU and install it in the system that is located in the hazardous area.

2.7.2 Preparation and Mounting


- If installing an auxiliary battery (IC693ACC302 or IC695ACC302), securely mount the battery to the panel mounting surface before attempting to connect the battery to the CPU. For mounting instructions, see the previous sections.
- If using a Smart Battery (IC698ACC701C or later, or IC695ACC302), connect the Enabling Cable to the Battery using the 4 pin connectors.
Note: Disconnect the enabling adapter cable from the battery pack when the battery is not attached to a CPU (when the enabling adapter cable is connected, the battery drains to support the smart circuitry, even if it is not attached to the CPU).
- If using the rechargeable battery (IC690RBT001), securely mount the battery and its charger (IC690CRG001) to the panel mounting surface before attempting to connect the battery to the CPU. For mounting instructions, see the previous sections. Insert the charging jack into the threaded connector on the side of the battery and hand-tighten the screw lock to secure it.

2.7.3 Installation and Replacement


1. Access the battery compartment on the CPU by opening the door (RX3i) or removing the battery cover (RX7i) - (refer to the battery installation figures below)
2. Turn on power and wait for the CPU to complete its initialization. Initialization is complete when the OK LED on the CPU remains on.
3. Connect the battery to either of the battery connectors on the CPU. If replacing an existing battery, connect the new battery to the other connector before disconnecting the old battery (be careful to not disconnect the old battery until the new battery is connected). Properly discard the old battery per the disposal instructions (See *Safe Handling & Disposal*).
4. For Coin Cell batteries, secure the battery in the compartment and close the compartment door (RX3i) or install the battery cover (RX7i).
5. For auxiliary batteries and the rechargeable battery, route the battery cable through the notch in the base of the battery compartment (RX3i) or the slot in the bottom of the battery cover (RX7i) and close the compartment door (RX3i) or install the battery cover (RX7i).

Be careful not to pinch the battery cable when closing the battery compartment cover.

RX3i Battery Installation Diagram

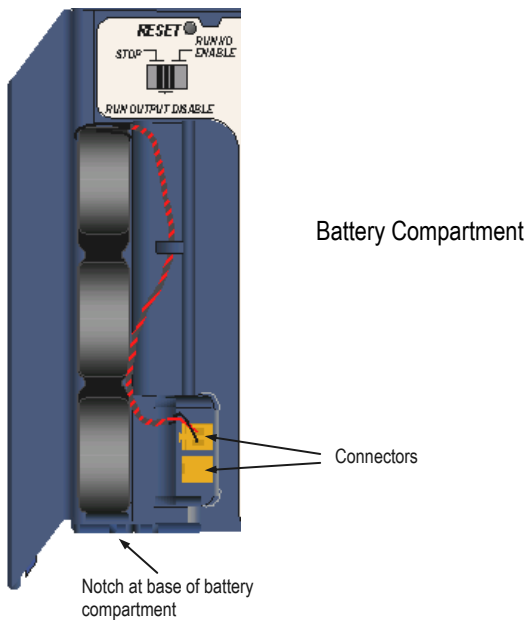

RX7i Battery Installation Diagram

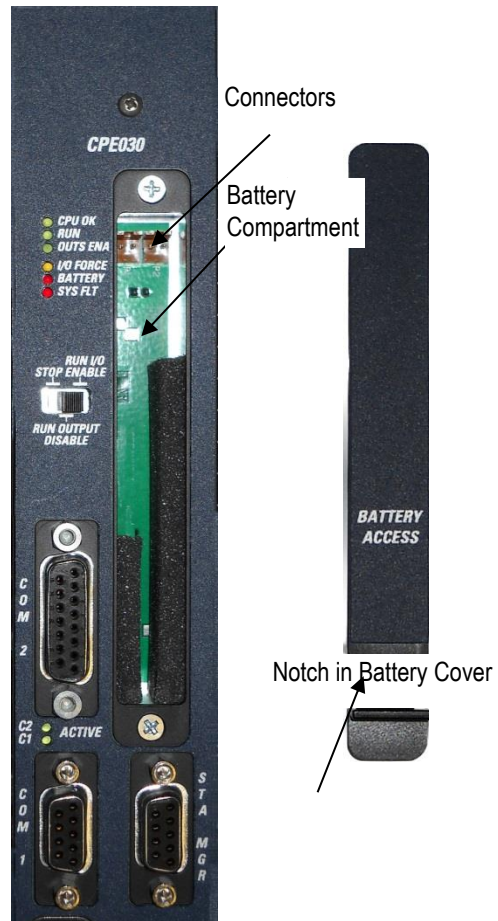

An earlier version RX7i CPU may not have a slot in its battery door. For these CPUs, replace the door (supplied with the IC698ACC701 replacement battery).

2.8 Date Code & Shelf Life

Date Code:

The date code is located on the product label on the front of the battery. The date code consists of four digits, such as 1234. The first two digits represent the year of manufacture in the 21st century; such as 12 for 2012. The last two digits indicate the fiscal week of manufacture; for example 34 stands for fiscal week 34

Shelf Life:

Unused battery packs that have exceeded their shelf life should not be used and should be discarded according to *Safe Handling & Disposal* instructions below.

Battery	Shelf-Life	
Smart Auxiliary	IC695ACC302	7 years @ 20°C without the enabling adapter cable attached
Legacy Coin Cell	IC698ACC701 A & B	5 years @ 20°C
Smart Coin Cell	IC698ACC701 C and later	5 years @ 20°C without the enabling adapter cable attached
Legacy Auxiliary	IC693ACC302	7 years @ 20°C
Rechargeable	IC690RBT001	3 years @ 20°C

2.9 Safe Handling & Disposal



Warning

Batteries may present a risk of fire, explosion, or chemical burn if mistreated. Do not crush, disassemble, short-circuit, or dispose of in fire. Use of batteries not specified for use with PACSystems products may present a risk of fire or explosion. Refer to Section 2.2 for details on PACSystems battery compatibility.



Lithium Battery Warning

Do not recharge, disassemble, heat or incinerate lithium batteries.

Dispose of lithium batteries in accordance with federal, state, and local regulations. Be sure to consult with the appropriate regulatory agencies before disposing of batteries.

2.10 Agency Certifications

In order to maintain agency certification batteries must be mounted within a protective enclosure providing a pollution degree 2 environment, IP54 ingress protection, and mechanical impact strength equal to or greater than 3.5 Joules.

Note: Batteries that mount within the housing of a module only need to adhere to the installation requirements of that module.

2.10.1 Batteries

These products are UL Listed Accessories for the PACSystems RX3i and RX7i family of PLCs and have been evaluated to the following standards for use in ordinary and hazardous areas:

- UL 2054
- ANSI/ISA 12.12.0.1 (UL File E157515)
- In addition, IC690RBT001 has been evaluated to IEC62133

2.10.2 Charger: IC690CRG001

This product is a UL Recognized Component and has been evaluated to the following standard for use in ordinary location:

UL 60601-1 (UL file E208921)

Note: Charger has not been evaluated for use in hazardous areas and therefore should not be used in that environment.

3. Energy Packs

An Energy Pack is used in conjunction with a Controller to preserve user memory in the Controller during power fluctuations or outages.

If system power is lost, the Energy Pack maintains power long enough for a Controller to write its user memory contents to non-volatile memory. When system power is restored, the user memory is restored if the Controller is configured to power up from RAM.

3.1 Energy Pack Compatibility

The correct Energy Pack must be used with the corresponding controller. Do not attempt combinations except those shown as “compatible” in the table below:

Energy Pack Cap Pack Controller	IC695ACC400	IC695ACC402 IC695ACC412	ICRXIACCEPK01A ICRXIACCCPK01A
ICRXICTL000	Incompatible	Incompatible	Compatible
IC695CPE305 IC695CPE310	Compatible	Incompatible	Incompatible
IC695CPE330	Incompatible	Compatible	Incompatible

3.2 PACSystems RXi Energy Pack (ICRXIACCEPK01A)

3.2.1 Specifications

Part Numbers

ICRXIACCEPK01A	Energy Pack. Includes base, Cap Pack module and Energy Pack to Controller cable
ICRXIACCCPK01A	Replacement Cap Pack module
ICRXIACCCBL01A	Replacement 0.3m (12") Energy Pack to Controller cable

Functional Specifications

Dimensions	114.05 × 77.47 × 63.75 mm (4.49" × 3.05" × 2.51")
Input voltage range	20–30 Vdc
Input power, maximum	36 W + connected device power requirement
Output voltage range	18–30Vdc
Output power maximum	45 W
Output current maximum	2.25 A
Backup trip voltage	19 Vdc ±4%
Capacitor Pack life expectancy	5 years

Environmental Specifications

The Energy Pack shall be installed in a location that is not exposed to corrosive gases or liquids, rain, or direct sunlight, and that meets the environmental specifications listed below.

Operating Temperature, surrounding air	-25 °C to 60 °C
Storage Temperature	-40°C to +85°C (-40°F to 185°F)
Humidity	5% to 95%, non-condensing
Environment	Restricted Access Area and Pollution Degree 2 environment as defined below.

3.2.2 General Installation Environments

In order to maintain the *Agency Certifications* listed below, installation must comply with the following requirements.



Warning

The Energy Pack must be installed in a Restricted Access Area, as defined by:

- Access can only be gained by service persons or by users who have been instructed about the reasons for the restrictions applied to the location and about any precautions that shall be taken; and
- Access is through the use of a tool or lock and key, or other means of security, and is controlled by the authority responsible for the location.

The Energy Pack must be installed in a **Pollution Degree 2 environment** as defined by:

- Pollution Degree 2 applies where there is only non-conductive pollution that might temporarily become conductive due to occasional condensation.

3.2.3 Industrial Environment Installations

For use in industrial environments this product is considered open equipment [having live electrical parts that may be accessible to users] and must be installed in an ultimate enclosure that is manufactured to provide safety. As a minimum, the enclosure shall provide a degree of protection against solid objects up to 12mm (e.g. fingers). This equates to a NEMA/UL Type 1 enclosure or an IP20 rating (IEC60529) providing at least a pollution degree 2 environment.


3.2.4 Hardware Installation

The Energy Pack can be mounted on a standard EN50022 DIN rail or an equipment panel. It is designed to be mounted adjacent to the Controller and connected to the Controller using the provided 12" cable (ICRXIACCCBL01A) or a user-supplied cable.

Refer to section on *Grounding* for important grounding instructions.

3.2.4.1 Mounting the Energy Pack on a DIN Rail

The Energy Pack snaps easily onto the DIN rail. No tools are required.

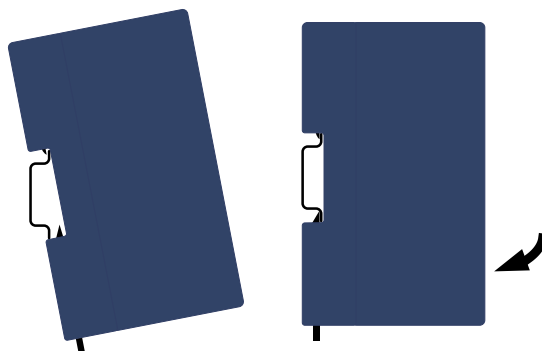

Note: To remove the Energy Pack from the DIN rail, use a small flat-blade screwdriver to pull down on the tab on the bottom of the Energy Pack and then lift the module off the DIN rail.

3.2.4.2 Mounting the Energy Pack Directly on a Panel




Caution

Over tightening the mounting screws could crack the plastic housing.

Heat dissipation: When mounting the Energy Pack on a panel, allow a minimum clearance of 25.4mm (1 inch) on the four sides of the unit (right, left, top and the bottom).


Recommended fasteners: Four M4-0.7 machine screws with minimum length of 25mm (or 8-32, 1" min. length) and nuts

1. Drill four mounting holes using the spacing shown in the following drawing.
2. Use the machine screws and nuts to attach the Energy Pack to the panel.

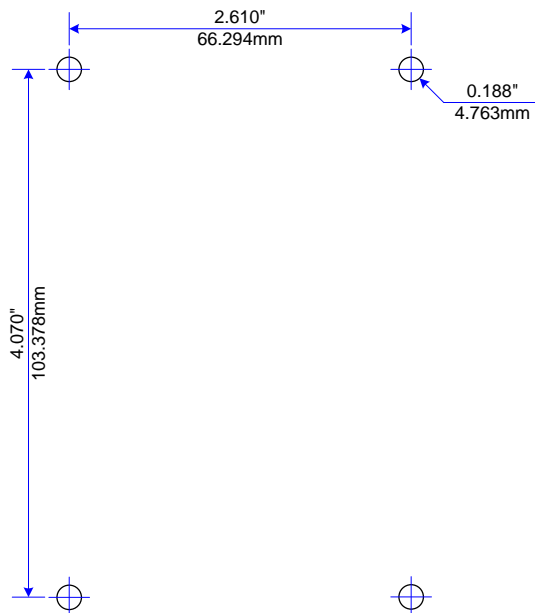

Drilling Pattern for Direct Panel Mounting

3.2.5 Cable Connections

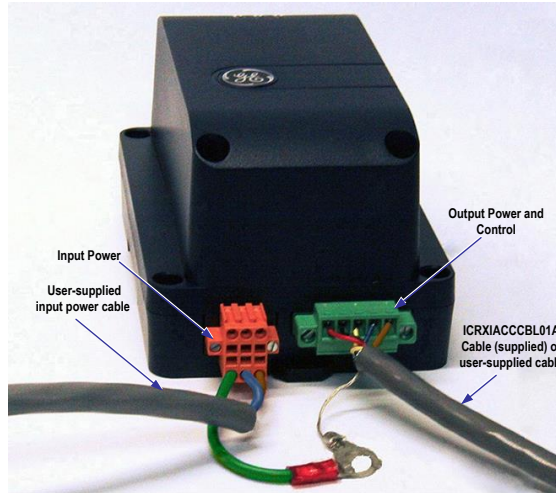

Input Power and Output Power/Control Connections

3.2.5.1 Connecting Input Power to the Energy Pack

You will need:


- A power cord with 18 AWG (0.82mm²) copper wires
- An 18 AWG (0.82mm²) copper wire for frame ground
- An input power terminal block – provided (Weidmüller part number 1748010000)
- A small flat-head screwdriver (such as a 1.4 mm jeweler’s screwdriver)
- A 24Vdc, 72 W minimum power supply, that must provide reliable grounding and Secondary Extra Low Voltage (SELV) output or other form of isolating secondary circuit.

Power Supply Requirements: When the Energy Pack is powered by an LPS Class 2, or a Limited Voltage/Current power source, no additional over-current protection is required. Otherwise, power supply branch circuit overcurrent protection of no more than 20 A with a readily accessible disconnect is required, along with supplementary protection ranging from 4 to 7 amps on the output of the power supply.

1. Using the power cord, connect the power supply output to the input power terminal block of the Energy Pack.

To insert the wires in the power terminal block connector, you may need to use the small screwdriver to release the spring clamp on the terminal block.

Recommended wire stripping length is 7mm (0.28 in).

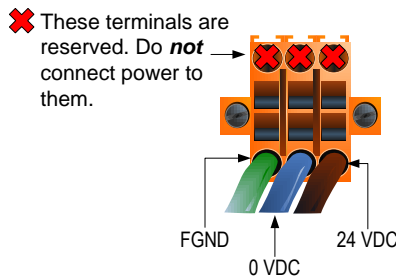

2. Insert the plug into the Input Power connector of the Energy Pack and securely tighten the attaching screws.


3.2.5.2 Connecting the Energy Pack to the Controller

Note: Do not attach the Energy Pack to the Controller without first updating the Controller to the minimum required firmware version, as specified in the Controller documentation.

With power to the system turned off, use the supplied cable or a user-supplied cable (1 m maximum length) to connect the output of the Energy Pack (green connector) to the 24Vdc input on the Controller (orange connector).

3.2.6 Grounding

Proper grounding of this device is essential. All ground wires must be as short as possible and terminate at the same grounding point.

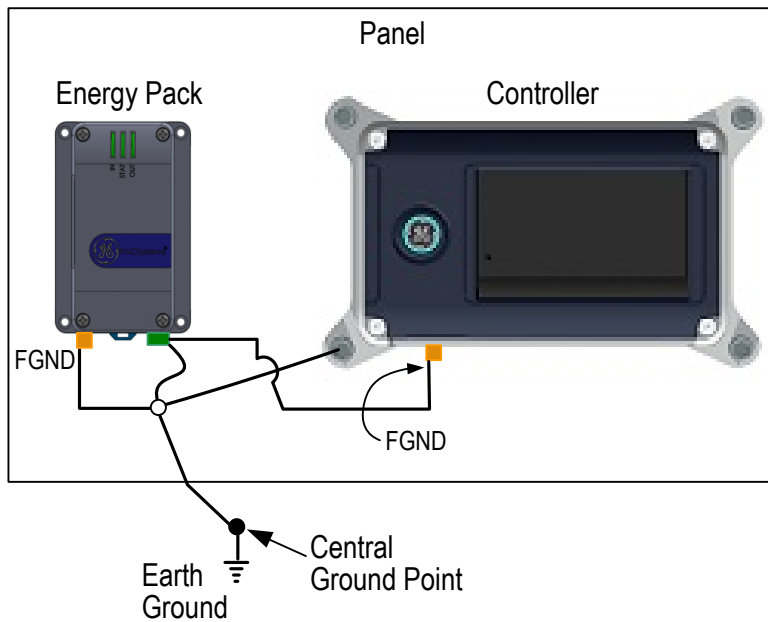

Sample Grounding Connections

3.2.7 Power-up

When power is applied to the Energy Pack, the power-up process goes through the following steps:

1. The IN LED turns on green.
2. The Energy Pack performs a self-diagnostic test. If this test passes, output power to the Controller is turned on and the OUT LED turns on green.
3. Charging of the Cap Pack begins and the STAT LED blinks green.
4. When charging of the Cap Pack is complete, the STAT LED turns on solid green and the Energy Pack signals to the controller that it can start run-time operation. The Controller will not start running its application until the Energy Pack signals that it is fully charged.



3.2.8 LED Indications

LED	LED State	Energy Pack Status
IN	Green, solid	Input power is applied and within the specified range.
	Red, solid	Input power is outside the specified range (20–30Vdc).
	Off	Input power is not applied.
STAT	Green, blinking	Charging of Cap Pack is in progress. No fault exists.
	Green, solid	Cap Pack is fully charged and no fault exists.
	Amber, blinking	Cap Pack is nearing end-of-life. The Cap Pack must be replaced soon. Backup is still guaranteed.
	Red, blinking	Internal fault: Cycle power to the Energy Pack. If this does not clear the fault, contact Technical Support and replace the Energy Pack.
	Red, solid	Cap Pack has reached end-of-life. Replace the Cap Pack. Backup is not guaranteed.
	Off	No power applied.
OUT	Green, solid	Output power is within the specified range.
	Red, solid	Output power is present but is outside the specified range (20–30 Vdc).
	Off	Output power is not present.

3.2.8.1 LED Indications: Special Cases

All LEDs blinking in unison: See *Firmware Updates*.

3.2.9 Backup Operation

While the Controller is running, if the input voltage to the Energy Pack falls below 20 Vdc, the Energy Pack will immediately switch to backup power and signal the Controller to initiate a memory backup.

The Energy Pack supplies power long enough for the Controller to back up memory and then turns off power to the Controller. When the input voltage to the Energy Pack returns to normal, the power-up routine begins.

3.2.10 Service and Maintenance

3.2.10.1 Replacing the Cap Pack Module

The Cap Pack is typically removed and replaced while power is applied to the Energy Pack (hot swapped.)



Warning

When replacing the Cap Pack, potentially hazardous energy could be present. Only handle by the plastic case. Do not allow a short across the printed wiring assembly components or connectors.



Caution

When hot swapping Cap Packs, do not cycle power until the new Cap Pack is fully charged and operational. Cycling power before the STAT LED on the Cap Pack is solid green can result in Controller memory not being preserved. Do not hot remove/insert the Cap Pack during the firmware update process.

1. Loosen the four screws on the Cap Pack and carefully pull the Cap Pack off the base.
2. Install the new Cap Pack on the base, first engaging the module-to-base connectors and then pressing the Cap Pack into place.



Caution

Over tightening the mounting screws could crack the plastic housing.

3. Use the four screws provided to secure the Cap Pack to the base.
4. When the Cap Pack is first inserted, the STAT LED blinks green while the Cap Pack is charging. Do not remove power to the Energy Pack while the Cap Pack is charging because this could result in Controller memory not being preserved.
5. The Energy Pack LEDs and the Controller status bits indicate when charging is complete and the Energy Pack is ready to support backup.
6. To remove a Failed Battery fault and clear battery status bits, clear the Controller fault table.
For details on status bit operation, refer to the corresponding Controller user manual.

3.2.10.2 Firmware Updates

The firmware for the Energy Pack is automatically updated by the Controller. At power-up, the Controller checks the version of Energy Pack firmware to verify compatibility with the Controller firmware. If an update is needed, the Controller performs it automatically.

LED Indications for Firmware Updates

Firmware Update Mode	All three LEDs blink green
----------------------	-----------------------------------

3.2.11 Diagnostics

3.2.11.1 System Version Information

The Controller's web-based home page displays serial number and version information for the Base and Cap Pack. For additional information, refer to the Controller user manual.

3.2.11.2 Status Information

The Energy Pack provides the following status information to the Controller, which it uses to generate fault and status bit indications. For Controller fault and status bit details, refer to the Controller user manual.




- Charging** The Energy Pack is charging; not yet fully charged.
- Fault** A hardware fault exists in the Energy Pack.
- Low capacitance** The Energy Pack is near its end of life and should be replaced.
- Charged** The Energy Pack is fully charged and is ready to support CPU operation.

3.2.11.3 Energy Pack LEDs

Details on the LED operation for this Energy Pack are listed in *LED Indications*.

3.2.12 Agency Certifications

The following table lists the standards to which the Energy Pack has been certified.

<i>Description</i>	<i>Agency Standard or Marking</i>	<i>Comments</i>
N.A. Safety for Information Technology Equipment		Certification by Underwriter's Laboratories to UL 60950-1 and CSA 60950-1
N.A. Safety for Industrial Control Equipment		Certification by Underwriter's Laboratories to UL 508 and CSA C22.2 No 142 - M1987
Electromagnetic Compatibility Directive European EMC		Self-Declaration in accordance with European Directives; Refer to Technical Support at http://www.ge-ip.com/ for EC Declaration of Conformity

Note: The agency approvals listed above and on the Declaration of Conformities are believed to be accurate; however, a product's agency approvals should be verified by the marking on the unit itself.

3.3 PACSystems RX3i Energy Pack (IC695ACC400)

Refer to PACSystems* RX3i Energy Pack IC695ACC400 IPI, GFK-2724.

3.4 PACSystems RX3i Energy Pack (IC695ACC402)

Refer to PACSystems* RX3i Energy Pack IC695ACC402 Quick Start Guide, GFK-2939.

4. Related Documents

PACSystems RX7i and RX3i CPU Reference Manual, GFK-2222*

PACSystems RX7i Installation Manual, GFK-2223*

PACSystems RX3i System Manual, GFK-2314*

PACSystems RX3i Energy Pack IC695ACC400 IPI, GFK-2724*

PACSystems RX3i Energy Pack IC695ACC402 Quick Start Guide, GFK-2939*

PACSystems RXi Distributed IO Controller User's Manual, GFK-2816

For user manuals, product updates and other information go to the Support website, <http://www.ge-ip.com/support> and refer to *Controllers and IO*.



**GE Intelligent Platforms
Information Centers**

Headquarters:
1-800-433-2682 or 1-434-978-5100
Global regional phone numbers
are available on our web site
www.ge-ip.com

Additional Resources

For more information, please visit the GE
Intelligent Platforms web site:

www.ge-ip.com