

**GFK-1630**  
**New In Stock!**  
**~~GE Fanuc~~ Manuals**

<http://www.pdfsupply.com/automation/ge-fanuc-manuals/ocs/GFK-1630>

**OCS**  
**1-919-535-3180**

Cscape Software IC300OSW232

[www.pdfsupply.com](http://www.pdfsupply.com)

**Email:** [sales@pdfsupply.com](mailto:sales@pdfsupply.com)



**User Manual for  
*IC300SW232***



**Cscape<sup>TM</sup>  
Software**

**Second Edition,  
19 March 1999**

# WARNINGS, CAUTIONS, AND NOTES as Used in this Publication

## Warning

Warning notices are used in this publication to emphasize that hazardous voltages, currents, temperatures or other conditions that could cause personal injury exist in this equipment or may be associated with its use.

In situations where inattention could cause either personal injury or damage to equipment, a Warning notice is used.

## Caution

Caution notices are used where equipment might be damaged if care is not taken.

## Note

Notes merely call attention to information that is especially significant to understanding and operating the equipment.

This document is based on information available at the time of its publication. While efforts have been made to be accurate, the information contained herein does not purport to cover all details or variations in hardware or software, nor to provide for every possible contingency in connection with installation, operation, or maintenance. Features may be described herein which are not present in all hardware and software systems. GE Fanuc Automation assumes no obligation of notice to holders of this document with respect to changes subsequently made.

GE Fanuc Automation makes no representations or warranty, expressed, implied, or statutory with respect to, and assumes no responsibility for the accuracy, completeness, sufficiency, or usefulness of the information contained herein. No warranties of merchantability or fitness for purpose shall apply.

The following are trademarks of GE Fanuc Automation North America, Inc.

Alarm Master	CIMSTAR	Helpmate	PROMACRO	Series Six
CIMPLICITY	GENet	Logicmaster	Series One	Series 90
CIMPLICITY 90 – ADS	Genius	ModelMaster	Series Three	VuMaster
CIMPLICITY Power TRAC	Genius PowerTRAC	ProLoop	Series Five	Workmaster

The following are trademarks of Horner Electric, Inc.

Cscape	SmartStack	CsCAN
--------	------------	-------

©Copyright 1999 GE Fanuc Automation North America, Inc.  
All Rights Reserved

# TABLE OF CONTENTS

<b>CHAPTER 1: INTRODUCTION.....</b>	<b>1</b>
1.1    PURPOSE.....	1
1.2    PREREQUISITES.....	1
<b>CHAPTER 2: CONVENTIONS USED IN THIS MANUAL.....</b>	<b>3</b>
2.1    PURPOSE.....	3
2.2    SEMANTIC CONVENTIONS.....	3
2.3    TYPOGRAPHICAL CONVENTIONS.....	3
2.4    MOUSE OPERATIONAL CONVENTIONS.....	4
2.4.1    Single Click or Click.....	4
2.4.2    Double Click.....	4
2.4.3    Right-Click.....	4
2.4.4    Select" or "Highlight.....	4
2.5    GRAPHICAL CONVENTIONS.....	4
<b>CHAPTER 3: PRODUCT OVERVIEW .....</b>	<b>5</b>
3.1    PURPOSE.....	5
3.2    PRODUCT OVERVIEW.....	5
<b>CHAPTER 4: SYSTEM REQUIREMENTS.....</b>	<b>7</b>
4.1    PURPOSE.....	7
4.2    REQUIREMENTS.....	7
<b>CHAPTER 5: INSTALLATION.....</b>	<b>9</b>
5.1    PURPOSE.....	9
5.2    DISTRIBUTION.....	9
5.3    INSTALLATION.....	9
5.4    RESULTS.....	9
5.5    EXECUTION.....	10
5.6    CUSTOMIZING THE INSTALLATION.....	10
<b>CHAPTER 6: GENERAL OVERVIEW – SCREENS, MENUS, AND TOOLS.....</b>	<b>11</b>
6.1    PURPOSE.....	11
6.2    SCREEN LAYOUT.....	11
6.3    MENUS.....	12
6.3.1    Main Menu.....	12
6.3.2    File Menu.....	13
6.3.3    Edit Menu.....	14
6.3.4    Program Menu.....	15
6.3.5    Controller Menu.....	16
6.3.6    Debug Menu.....	16
6.3.7    Tools Menu.....	17
6.3.8    Screens Menu.....	17
6.3.9    View Menu.....	18
6.3.10    Window Menu.....	18
6.3.11    Help Menu.....	19
6.3.12    Element Handling Popup Menu.....	19
6.3.13    Cscope Navigator Project Menu.....	20
6.3.14    Cscope Navigator Network Menu.....	20

6.3.15	Cscape Navigator Program Menu.....	21
6.3.16	Cscape Navigator Controller Menu.....	21
6.4	TOOL BARS .....	22
6.4.1	WINDOWS Tool bar .....	24
6.4.2	Program Control Tool bar .....	24
6.4.3	Controller Tool Bar .....	25
6.4.4	Target Node ID Tool.....	25
6.4.5	Security Tool Bar.....	25
6.4.6	Text Screen Editor Tool.....	25
6.4.7	Boolean Elements .....	26
6.4.8	Bit-wise (logical) Elements .....	26
6.4.9	Data Move Elements.....	26
6.4.10	Math Elements .....	27
6.4.11	Advanced Math Elements.....	27
6.4.12	Conversion Elements .....	28
6.4.13	String Manipulation Elements.....	28
6.4.14	Comm Port Functions.....	29
6.4.15	Special Functions.....	29
6.4.16	Status Bar .....	29
6.5	HOT KEYS .....	30

## CHAPTER 1: INTRODUCTION

### 1.1 Purpose

The purpose of Chapter One is to provide a brief introduction to Cscape Software and its use in controllers.


### 1.2 Prerequisites

A basic level of understanding of Microsoft Windows technology and operation is assumed. The manual assumes that the user is familiar with Windows-95 or Windows-NT.

Users need to know basic mouse operations and how to locate programs and files using Windows file management tools. They also need to know how to use and create shortcuts, and how to select, rename, save, and delete files.

Cscape uses Windows Common Dialogs to provide a consistent Windows "look and feel." They are pre-defined dialogs that perform specific Windows functions.

In Cscape, Windows Common Dialogs "File Open" and "File Save." are used. Both dialogs look identical except for the title bar at the top of the dialog:

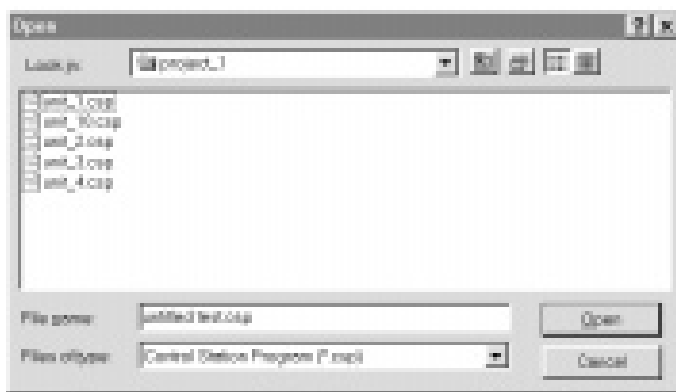

**Figure 1.1 - Example of a Dialog Window**

A user-level understanding of ladder logic programming coding is also assumed. This manual is not a tutorial for ladder logic programming.

## NOTES

## CHAPTER 2: CONVENTIONS USED IN THIS MANUAL

### 2.1 Purpose

The purpose of Chapter Two is to detail the visual and semantic conventions used in the manual.

### 2.2 Semantic Conventions

GE Fanuc controller products provide many features not normally available in *standard* Programmable Logic Controllers (PLCs). The Operator Control Station (OCS) product line includes features such as built-in displays and network capability.

GE Fanuc differentiates its product from a common PLC by referring to its product as a “controller” or as an “OCS”. Both the controller and the OCS have control capabilities. The major difference between a controller and an OCS is that an OCS has display capabilities.

### 2.3 Typographical Conventions

Whenever possible, graphics are used to depict the actions that need to be taken. In the cases where this is not possible, the following conventions are used:

- a. Menu Items, when referenced from text, are printed in Courier Type.

Example: `F_file`

- b. When a series of menu items must be selected, the items are printed in Courier and are separated by a vertical bar.

Example: `F_file|O_pen`

- c. Inputs typed by the user are also printed in Courier.

Example: To select the third item, type `<3>`



## 2.4 Mouse Operational Conventions

Cscape is a Windows-based program and depends heavily on the operation of the mouse.

In this manual, the term "left button" is used to describe the "main" button, the one that, when pressed, causes the primary action (usually the selection or activation of an item). The term "right button" describes the "other" button, which may or may not cause a significant action. The "center" button of a three-button mouse (or simultaneously clicking both buttons of a two-button mouse) is not used in Cscape.

Several mouse device drivers have the capability of "switching" mouse buttons to accommodate left-handed or right-handed users. Still, the "left" button causes the primary action, regardless of whether it is on the physical left or right side of the mouse.

The following conventions are used herein to describe mouse actions:

### 2.4.1 *Single Click or Click*

Move the mouse cursor into a suitable position, then press the LEFT mouse button ONCE.

### 2.4.2 *Double Click*

Move the mouse cursor into a suitable position, then press the LEFT mouse button TWICE in quick succession.

### 2.4.3 *Right-Click*

Move the mouse cursor into a suitable position, then press the RIGHT mouse button ONCE.

### 2.4.4 *Select" or "Highlight*

Move the mouse cursor over a desired item, and then press the LEFT mouse button ONCE.

## 2.5 Graphical Conventions

Graphics are used in the manual as much as possible. Whenever possible, a graphical representation is designed to look as much as possible like its real-world counter part.

COMPUTER KEYBOARD KEYS have a rounded, three-dimensional look



WINDOWS BUTTONS have a rectangular, flat look.



Cscape TOOLS have a square, flat look:



## CHAPTER 3: PRODUCT OVERVIEW

### 3.1 Purpose

The purpose of Chapter Three is to provide a brief overview of the Cscape product.

### 3.2 Product Overview

Cscape stands for "**C**ontrol **S**tation **A**pplication **P**rogramming **E**nvironment" Using Cscape, the complete control station line can be programmed using a single application programming package.

Included in Cscape are:

- The "drag and drop" Ladder Program Editor.
- Integrated Operator Interface Programming
- Controller Configurator, including I/O Configuration
- Project Navigator, for organization of large projects
- Real-time Debugger

Firmly based in Microsoft Windows technology, Cscape provides an intuitive, familiar interface that is easy to learn and use. Use of the mouse based interface reduces typing to a minimum. Most elements can be specified and placed using the mouse alone.

When a network (CAN, DeviceNet, etc) is provided by the controller products, Cscape can use the network to upload, download, and monitor any GE Fanuc controller residing on the network. Using the Network Pass Through Connection, Cscape can talk to any unit from one position. It is no longer necessary to make a direct physical connection to a unit to be programmed. Cscape can make a logical connection to the unit from any other unit on the network.

Configuration of attached controllers is handled by Cscape. Using Network Pass Through features, any unit can be programmed through a physical connection to any other unit.

Once the ladder program is written, it is automatically checked for syntax errors before it is downloaded. The source code causing syntax errors can be located through a simple click of the mouse.

Ladder source code can be protected from unauthorized viewing or editing by using "OEM Sections". Rungs of ladder code are marked as "OEM Sections", and can be viewed or edited only by personnel with proper security clearance.

Cscape programs can be "self-documenting". That is, it is possible to save the actual source code, comments, and element names to the target unit. Although this takes up valuable memory inside the controller, the complete program – source code, comments, and names – are available to individuals with a sufficient security clearance and the Cscape software. Disk files are not necessary

Physical errors or those errors originating from an outside source can be located by using the Cscape Debugger. This provides a real-time connection to all affected controllers. The user is able to view inputs and outputs and see the subsequent impact of each input and output as they are happening.

Cscape supports the complete GE Fanuc OCS line. Cscape can be manually configured for a specific product, and programs can be written before the hardware is available. Once connected to the network Cscape can automatically configure controllers.

Cscape is capable of supporting multiple ladder program files at one time. The programmer can develop a project which contains all source code files, hardware descriptions, and hardware configuration. Cscape can also debug *all* OCS units simultaneously from a single PC.

## CHAPTER 4: SYSTEM REQUIREMENTS

### 4.1 Purpose

The purpose of Chapter 4 is to describe the hardware and software components necessary to load and install Cscape.

### 4.2 Requirements

A personal Computer running Microsoft's Windows 95™, Windows 98™ or Windows NT™ Version 4.0 or later:

- 8MB of RAM Memory, minimum.
- Mouse
- 1 free serial port
- 600x800, 256 color video display recommended
- 10 MB of hard disk space

Additional hard disk space will be needed to store any ladder programs that are written.

If the computer uses a serial mouse, a second serial port must be provided for use by Cscape. Serial Port parameters used by Cscape are not user-definable. For reference, the Cscape serial port parameters are set at 9600 baud, 8 data bits, no parity, and 1 stop bit.

## NOTES

## CHAPTER 5: INSTALLATION

### 5.1 Purpose

The purpose of Chapter Five is to describe the installation process for Cscape.

### 5.2 Distribution

Cscape may be provided on two or more floppy diskettes, or on a single CD-ROM. There is no difference in the functionality caused by the distribution method.

In the case of floppy diskettes, the diskettes are clearly labeled `DISK 1`, `DISK 2`, etc. During the installation process you will be asked to insert Disk 2 and any subsequent diskettes, if necessary.

In the case of CD-ROM, there is only one disk provided.

### 5.3 Installation

The Cscape Distribution disk contains an Installation Wizard.

On floppy diskette 1 or on the CD-ROM locate and run the `SETUP.EXE` program. Complete instructions are included.

There is only one point where a relatively important decision must be made. You will be asked to choose a directory in which to install Cscape.

The default directory is `C:\Program Files\Cscape`. This will be acceptable for most installations. Some customers, though, may wish to customize this. The most common "custom" directory is `C:\Cscape`.

In any case, it is important that you remember the Cscape "home" directory path, be it `C:\Program Files\Cscape`, `C:\Cscape`, or something else.

### 5.4 Results

A successful Cscape installation will perform the following actions:

- The specified Cscape "home" directory will be created if it does not already exist.

- A special PROJECTS directory will be created in the Cscape "home" directory,

  - `[home]\PROJECTS`.


- The Cscape executable will be installed in the "home" directory.

- Cscape Help Files will be installed in the "home" directory.

- Cscape will be attached to the Start Menu by placing a group in the `C:Windows\Start Menu\Programs` directory. This group contains shortcuts that can be copied to the desktop or to the Start Menu itself.

## 5.5 Execution

Cscape is launched by locating and clicking its shortcut:

- Click on the Start Button, 
- Highlight the PROGRAMS menu.
- Highlight the CSCAPE menu.
- Highlight the Cscape Shortcut.

## 5.6 Customizing the Installation

There is little that can be customized. The only useful customization is to create a shortcut in a more easily accessible location.

- Using standard Windows techniques, locate the `C:\Windows\Start Menu\Programs\Cscape` directory.
- Right-Click on the Cscape icon.
- Select COPY from the popup menu.
- Close the directory.
- Click the mouse on the Windows Desktop.

This places the Cscape Icon on the desktop for easier use.

## CHAPTER 6: GENERAL OVERVIEW – SCREENS, MENUS, AND TOOLS

### 6.1 Purpose

The purpose of Chapter Six is to describe the screen layout, menus, and tools available to the Cscape user.

### 6.2 Screen Layout

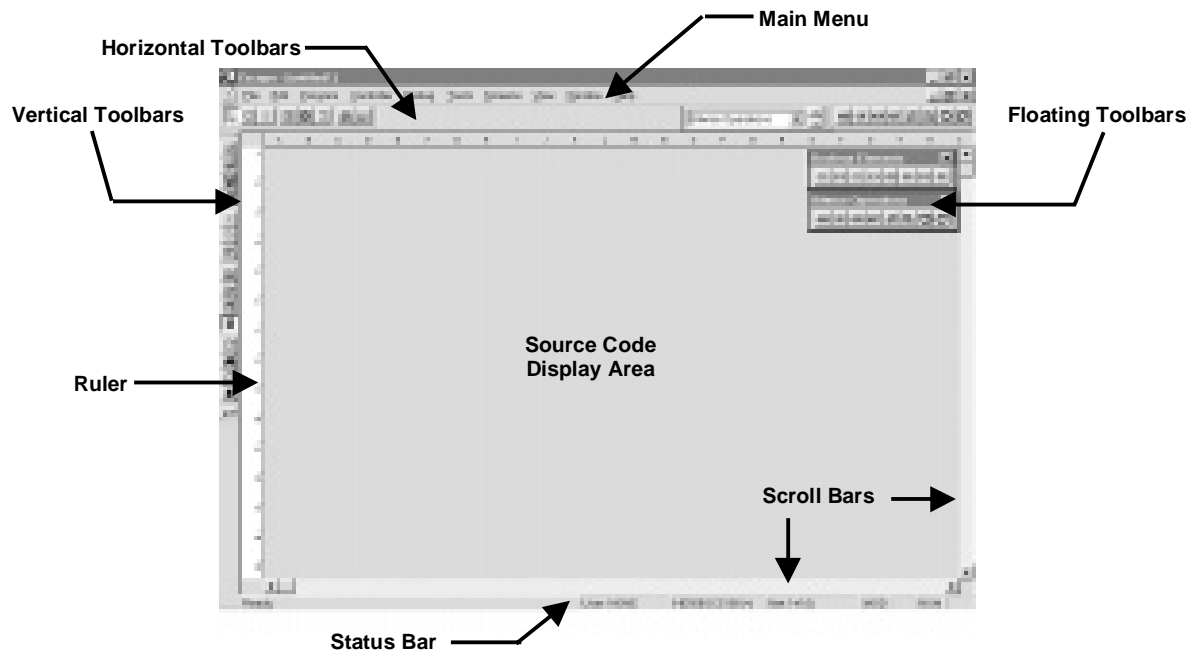


Figure 6.1

Once invoked, the Cscape screen appears as follows:

The important parts of the display are:

- Source Code Display Area** The ladder program source code is displayed in this area
- Main Menu** This is the Main Menu which contains the main function grouping from which all sub-menus are derived.
- Ruler** This contains the Line Number and/or Rung Number of the ladder programs source code.
- Scroll Bars** Use these windows to view areas of the source code that are not already visible on the screen.
- Status Bar** This contains the status of the Cscape package.

Toolbars may be placed horizontally, vertically, or "floating":


- Horizontal Toolbars** Toolbars placed in this area will be placed horizontally across the tops of the display.
- Vertical Toolbars** Toolbars placed in this area will be placed vertically along the left side of the display.
- Floating toolbars** Toolbars that are not otherwise placed in the vertical or horizontal areas will appear as child windows, and will "float on top of" any other information or windows displayed by Cscape.



### 6.3 Menus

Like most Windows programs, Cscope depends heavily on menus. The following is a discussion of the menus and their functions.

#### 6.3.1 Main Menu

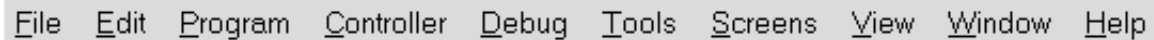

The image shows a horizontal menu bar with ten items: File, Edit, Program, Controller, Debug, Tools, Screens, View, Window, and Help. Each item has a small letter underlined, indicating a mnemonic key. The menu bar is enclosed in a thin black border.

**Figure 6.2**

The Main Menu is always present at the top of the Cscope window. The following sub-menus are available:

<b>File</b>	Provides file handling capabilities: Open, Close, Print, etc.
<b>Edit</b>	Provides editing capabilities: Cut, Copy, Paste, etc.
<b>Program</b>	Provides functions at the program level: Upload, Download, verify, etc.
<b>Controller</b>	Provides functions at the controller level: Run, Stop, Network ID, etc.
<b>Debug</b>	Provides access to the Debug facilities.
<b>Tools</b>	Provides system-wide utilities such as security and system options
<b>Screens</b>	Provides access to the Text Screen Editor and Remote Terminal Access
<b>View</b>	Provides access to "viewed" features such as comments, grid line, and toolbars.
<b>Window</b>	This is a standard Windows access menu allowing access to a New Window, tiling, etc
<b>Help</b>	Provides access to the on-line help file.

## 6.3.2 File Menu

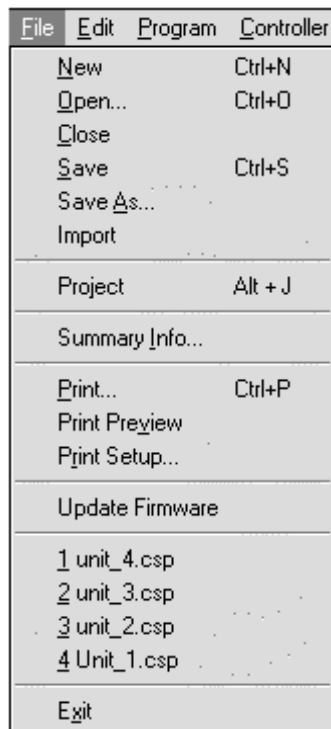


Figure 6.3

<b>New</b>	Opens a NEW ladder program file (CSP)
<b>Open...</b>	Invokes the familiar Windows File Open dialog
<b>Close</b>	Closes the current selected ladder program window.
<b>Save</b>	Saves the currently selected ladder program
<b>Save As...</b>	Invokes the familiar Windows Save As dialog to allow the user to save a file under a new name.
<b>Import</b>	Allows importation of ladder program source files created by the HEPLC Program Editor
<b>Project</b>	Invokes the Create/Open Project dialog.
<b>Summary Info...</b>	Allows the user to add or edit information in the File Summary.
<b>Print</b>	Provides printing features
<b>Print Preview</b>	Provides Print Preview Features
<b>Print Setup...</b>	Provides access to the Printer Setup Dialog Box
<b>Update Firmware</b>	Provides a method to update OCS firmware from within Cscape.
<b>MRU List</b>	Provides a list of the four Most recently Used files.
<b>Exit</b>	Saves and closes all files, then exits the Cscape environment

## 6.3.3 Edit Menu

File	Edit	Program	Controller
	<u>U</u> ndo		Ctrl+Z
	Cu <u>t</u>		Ctrl+X
	<u>C</u> opy		Ctrl+C
	<u>P</u> aste		Ctrl+V
	<u>D</u> elete		Delete
	S <u>e</u> lect <u>A</u> ll		Ctrl+A
	<u>F</u> ind...		Ctrl+F
	<u>R</u> eplace...		Ctrl+H
	<u>G</u> o To...		Ctrl+G
	<u>R</u> ead Only		

Figure 6.4

<b>Undo</b>	Cancels the last edit.
<b>Cut</b>	Copies the selected elements into an internal buffer for future use, then deletes the selected elements. The deleted elements remain available for future use (paste).
<b>Copy</b>	Copies the selected elements into an internal buffer for future use. The selected elements are not deleted.
<b>Paste</b>	Pastes any information from the internal buffer to the file at the current cursor position.
<b>Delete</b>	Deletes the selected elements. The elements are not saved and can not be re-used.
<b>Select All</b>	Selects all elements in the source file.
<b>Find</b>	Invokes a dialog to allow you to find an element.
<b>Replace</b>	Allows the user to replace a registers reference with a different register reference.
<b>Go To...</b>	Allows the user to go to any LINE NUMBER or RUNG NUMBER.
<b>Read Only</b>	This feature is not implemented in the version of Cscope

## 6.3.4 Program Menu


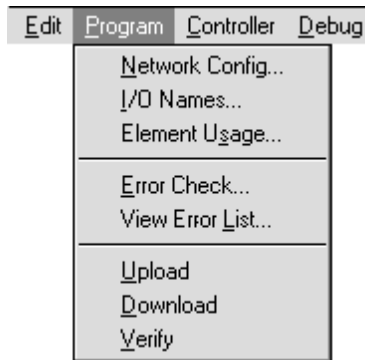


Figure 6.5

<b>Network Inputs...</b>	Invokes a dialog for the assignment of Network (%IG, %QG) points.
<b>I/O Names...</b>	Provides a dialog for the naming of I/O points.
<b>Element Usage</b>	generates a "report" about how I/O Elements are used.
<b>Upload</b>	Starts the procedure to upload a program from a controller into Cscape.
<b>Download</b>	Starts the procedure to download a program from Cscape to a controller.
<b>Verify</b>	Starts the procedure to verify a program in a controller with that displayed in Cscape.
<b>Error Check...</b>	Checks the selected source code for syntax errors.
<b>View Error List...</b>	Views the Error List generated by the last Error Check.


### 6.3.5 Controller Menu

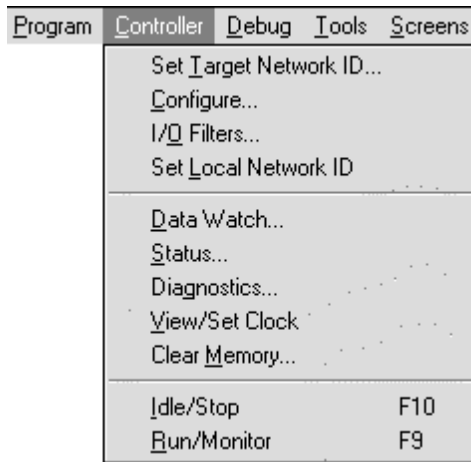

**Figure 6.6**

<b>Target ID... Configure...</b>	Sets the Target ID for the controller associated with the selected ladder program File. Starts the procedure to Select or Configure a Controller Model Type to be associated with the ladder program file.
<b>I/O Filters...</b>	Allows tuning of the Digital Input Filters and the Network Update Time.
<b>Set Network ID</b>	Allows the user to set the Network ID of the Target Unit (if the Target has the ability to change the Network ID by software).
<b>Data Watch...</b>	Starts the Watch Window.
<b>Status...</b>	Takes an instantaneous "snapshot" of the status of the selected controller.
<b>Diagnostics...</b>	Displays the Status of the selected controller.
<b>View/Set Clock</b>	This feature is not available in this version of Cscape
<b>Clear Memory...</b>	Allows the user to clear all of the OCS' memory – program, retentive registers, etc.
<b>Idle</b>	Sets the selected controller to the Idle Mode
<b>Run/Monitor</b>	Sets the selected controller to the Run Mode.

### 6.3.6 Debug Menu

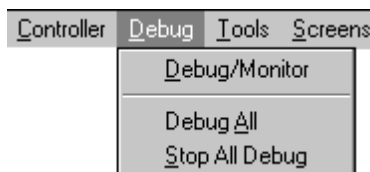

**Figure 6.7**

<b>Debug</b>	Puts the selected ladder program into the Debug Mode, and creates a real time connection to the associated controller.
<b>Debug All</b>	Places ALL ladder programs into the Debug Mode, and creates a real time connection to all associated controllers.
<b>Stop All Debug</b>	Turns off the Debug All mode.

## 6.3.7 Tools Menu

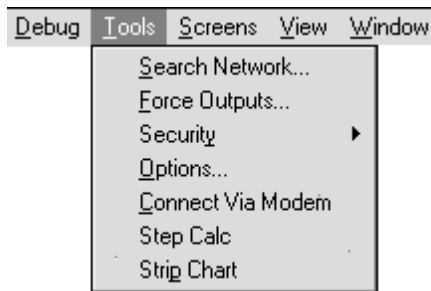


Figure 6.8

<b>Search Network...</b>	Searches the network for all available controllers, then reports their Run Status (RUN/Idle).
<b>Force Outputs...</b>	Allows the user to force outputs to a known state. The controller must be in Idle Mode.
<b>Security...</b>	Starts the Security procedures.
<b>Options...</b>	Starts the procedure to set up system-wide options.
<b>Connect Via Modem</b>	Allows the user to configure a modem in order to program a remote OCS using telephone lines.
<b>Step Calc</b>	Invokes the Stepper Motion Parameter Calculator dialog.
<b>Strip Chart</b>	Invokes a four-element strip chart dialog. Although intended as an aid in PID tuning, this chart can be used with any four INT (16-bit) registers.

## 6.3.8 Screens Menu

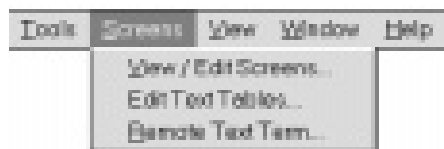


Figure 6.9

<b>View/Edit Screens</b>	Starts the built-in Text Screen Editor.
<b>Edit Text Tables</b>	Start the built-in Text Table Editor.
<b>Remote Text Term</b>	Creates a real-time connection to the associated controller and allows the user to manipulate the controller's front panel under the control of Cescape.

## 6.3.9 View Menu

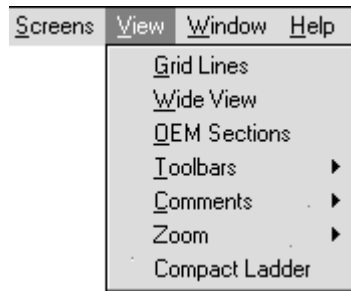


Figure 6.10

<b>Grid Lines</b>	Turns ON or OFF the grid lines used for placement of ladder program elements.
<b>Wide View</b>	Make the element grid position wider so that long element names may be more easily read.
<b>OEM Sections</b>	Allows special "OEM" (proprietary) code sections to be seen <i>if the proper password is provided</i> .
<b>Tool Bars</b>	Allows the user to turn ON or OFF those toolbars that have this capability.
<b>Comments</b>	Allows the user to place comments inside the ladder program.
<b>Zoom</b>	Allows the display to be "zoomed" for better viewing of selected areas.
<b>Compact Ladder</b>	Removes all blank rungs and lines from the ladder program

## 6.3.10 Window Menu

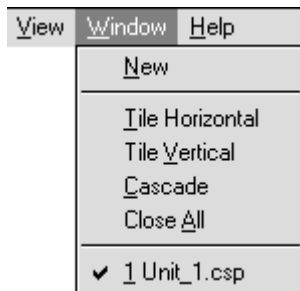


Figure 6.11

<b>NEW</b>	CREATES A NEW, VIEW OF THE CURRENT CODE WINDOW.
<b>Tile Horizontal</b>	Tiles all open windows in a horizontal manner.
<b>Tile Vertical</b>	Tiles all open windows in a vertical manner.
<b>Cascade</b>	Tiles all open window in a cascade manner.
<b>Close All</b>	Closes all open windows.
<b>Open Window List</b>	This is a list of all opened windows.

## 6.3.11 Help Menu

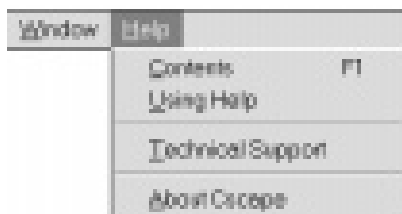


Figure 6.11

<b>Contents</b>	Goes directly to the Contents Page of the Cscape Help File.
<b>Using Help...</b>	Provides information on how to use the help function.
<b>Technical Support...</b>	Provides information on how to reach Technical Support
<b>About Cscape</b>	Provides version information about Cscape.

### 6.3.12 Element Handling Popup Menu




**Figure 6.12**

This menu pops up when the user right-clicks on a ladder program element:

<b>Cut</b>	Places the selected elements into an internal buffer, then removes them from the ladder program. The "cut" elements are available for future use using "paste".
<b>Copy</b>	Places the selected elements into an internal buffer, but does NOT remove them from the ladder program. The "copied" elements are available for future use using "paste".
<b>Paste</b>	Places any elements that are in the internal buffer into the position indicated by the cursor.
<b>Element Properties</b>	Allows the user to set the element properties (i.e., Type, offset, name).
<b>Delete</b>	Deletes the selected elements. The elements are not available for future use.
<b>Edit Screen</b>	Invokes the built-in text Screen Editor.
<b>Where Used</b>	Lists all occurrences of the selected element.
<b>Add to Watch</b>	Adds the selected elements to the Watch Window.



### 6.3.13 Cscape Navigator Project Menu

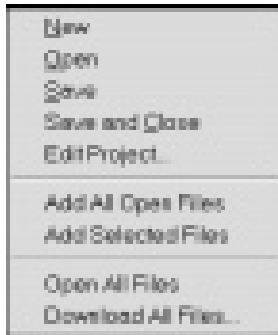

**Figure 6.13**

The menu is available only from the Cscape Navigator.

<b>New</b>	Creates a new project.
<b>Open</b>	Opens an existing project.
<b>Save</b>	Saves the information about this project, but keeps the project open.
<b>Save and Close</b>	Saves the project information, then closes the Navigator Dialog.
<b>Edit Project</b>	Allows user to change the project file (CPT) and notes for this project.
<b>Add All Open Files</b>	Adds all opened source code files (CSP) to this project.
<b>Add Selected Files</b>	Adds certain selected file to the project.
<b>Open All Files</b>	Opens all source code files (CSP) associated with this project.
<b>Download All Files</b>	Downloads all source code to the associated controllers.

### 6.3.14 Cscape Navigator Network Menu



**Figure 6.14**

The menu is available only from the Cscape Navigator.

<b>Add Network</b>	Adds a network to the project configuration.
<b>Edit Network</b>	Edits the name, type, and notes about a specific network.
<b>Open All Files</b>	Opens all files associated with the project.
<b>Download All Files</b>	Downloads all files to their associated controllers.
<b>RUN All Controllers</b>	Places all controllers on this network into the RUN mode.
<b>STOP All Controllers</b>	Places all controllers on this network into the STOP mode.
<b>Sort Controllers</b>	Sorts the controller in numeric order according to Node ID .
<b>Check Controller Status</b>	Reads each controller and indicate whether the controller is in RUN or IDLE mode.

## 6.3.15 Cscape Navigator Program Menu



Figure 6.15

<b>Edit Program</b>	Opens the selected program for editing
<b>Download Program</b>	Sends the selected program to the associated controller
<b>Verify Program</b>	Compares the selected program against the program already in the controller
<b>Print Program</b>	Sends the selected program to the printer
<b>View Summary</b>	View the program name, author, and notes for the selected program

## 6.3.16 Cscape Navigator Controller Menu



Figure 6.16

<b>Add Controller</b>	Add a new controller to an existing network.
<b>Edit Controller</b>	Allows the selected controller's name, source file, and Target ID to be changed.
<b>Rename Controller</b>	Changes the selected controller's name.
<b>Delete Controller</b>	Remove the selected controller from the project.
<b>Set Target ID</b>	Sets the Node ID associated with this controller.
<b>Download Program</b>	Download the program associated with this controller to the controller.
<b>Verify Program</b>	Compares the selected source code file with that already in the controller.
<b>Configure I/O</b>	Invokes the I/O Configuration dialog for this controller.
<b>Configure Network</b>	Invokes the Network I/O Configuration dialog for this controller.
<b>Run Controller</b>	Places the selected controller into the RUN mode.
<b>Stop Controller</b>	Places the selected controller into the IDLE mode.

## 6.4 Tool Bars

Next to menus, Tool Bars and Tools are the most common means to access program functions. Tool Bars are also highly configurable. In most cases, the user is able to configure how the Tool Bar looks and how it is displayed.

Cscope Tool Bars are "dockable" in that they may be automatically attached to the top or left side of the display area or they may "float" anywhere on the screen.

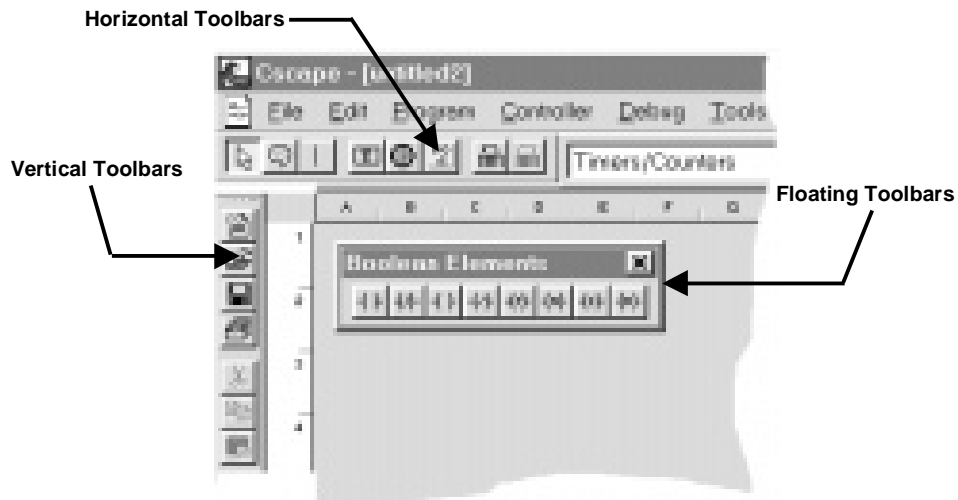


Figure 6.17

Because Cscope has many toolbars available, a method has been included to allow easy access to all toolbars without cluttering the display. The Toolbar Selection tool appears like the following:



This tool is used to select the Element Toolbars used while creating the Ladder program. The user may select an Element Toolbar by either using the drop-down list, or by using the spinner control. In either case, the selected toolbar appears to the right of the Selection Tool:



Unlike other toolbars, this toolbar is not completely "dockable". It may not be docked to the left side of the screen. If, after selecting one toolbar and floating or docking the result, another toolbar is selected, the docked image will return to its rightful place beside the Selection Tool.

If it is desired for the Element Toolbars to be fully dockable, select from the View|Toolbars menu.

Several Tool bars are available:

	Boolean Elements tool bar
	Bit-wise Elements Tool bar
	Math Elements Tool bar
	Advanced Math Element Toolbar
	Comparison Elements Tool bar
	Timer/Counter Elements Tool bar
	Data Move Elements Tool bar
	String Elements
	Communications Elements
	Special Elements
	Windows Tool bar
	Controller Tool bar
	Program Control Tool bar
	Security Tool bar
	Configure Controller
	Target ID Selector
	Text Screen Editor

Status Line

Ready		User: NONE	HE5000CS100 (Model =)	Local:1 Target:1(R)	MOD
-------	--	------------	-----------------------	---------------------	-----

6.4.1 *WINDOWS Tool bar*

**New** Opens a new CSP file



**Cut** Deletes the currently selected element



**Open** Opens an existing CSP file



**Copy** Copies the currently selected element



**Save** Save the currently selected CSP file



**Paste** Pastes any elements from the internal buffer into the currently selected CSP file.



**Project** Opens or creates a CPJ file

6.4.2 *Program Control Tool bar*

**Error Checking** Check the currently selected program for syntax errors



**Find** Specify and find an element in the CSP file



**Data Watch** Opens a Data Watch window



**Debug** Enter the Debug Mode

### 6.4.3 Controller Tool Bar

**Download**

Download the currently selected CSP file to the controller.

**Upload**

Upload the file from the controller into the currently selected CSP file.

**Set Controller to RUN mode**

Set the selected controller to RUN mode

**Set Controller to DO I/O Mode**

Set the selected controller to the DO I/o mode

**Set Controller to IDLE mode**


Set the selected controller to IDLE mode

### 6.4.4 Target Node ID Tool



Selects the Node ID of the target unit in a Pass Through Connection.

### 6.4.5 Security Tool Bar

**Log In**

Log in to System Security as a new user

**Log Out**

Log out of System Security

### 6.4.6 Text Screen Editor Tool



Invokes the Text Screen Editor.

6.4.7 Boolean Elements



Normally Open Contact



Normally Closed Contact



Normally Open Coil



Normally Closed Coil



Positive Transition Coil



Negative Transition Coil




Set Coil



Reset Coil

6.4.8 Bit-wise (logical) Elements



Logical AND



Logical OR



Logical Exclusive OR



Logical NOT



Logical Shift Left



Logical Shift Right




Logical Rotate Left



Logical Rotate Right

6.4.9 Data Move Elements



Move Single Register



Move Block of Registers




Fill Block



Relative Block Move

## 6.4.10 Math Elements



$(x+y)$	Equation	÷	Divide
+	Plus (add)	MOD	Modulo
-	Minus (subtract)	√	Square Root
×	Times (multiply)	ABS	Absolute Value

## 6.4.11 Advanced Math Elements



$Y^X$	Exponentiate	TAN	Tangent
LOG <sub>10</sub>	Log	SIN <sup>-1</sup>	ArcSine
$e^X$	Exponent	COS <sup>-1</sup>	ArcCosine
LN	Natural Log	TAN <sup>-1</sup>	ArcTangent
SIN	Sine	RAD	Radians
COS	Cosine	DEG	Degrees
		↕	Scale



## 6.4.12 Conversion Elements



Integer to Real



Real to Double Integer



Double Integer to Real



Integer to Double Integer




Real to Integer



Double Integer to Integer

## 6.4.13 String Manipulation Elements



String Move



String Compare

6.4.14 Comm Port Functions



Open Comm Port



Transmit to Comm Port



Close Com Port



Modem Control



Receive from Comm Port



ModBus Comm Port

6.4.15 Special Functions



Stepper Move




Independent PID


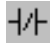











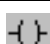


ISA PID

6.4.16 Status Bar



## 6.5 Hot Keys

Key	Tool	Functions
<F1>		Context Sensitive Help
<F2>		Select Normally Open (N/O) Contact
<F3>		Select Normally Closed (N/C) Contact
<F4>		Select Branch Element
<F5>		Select Comment Element
<F9>		Select Normally Open (N/O) Coil
<ESC>		Select Tool
<CTRL><N>		Open New File
<CTRL><O>		Open Existing File
<CTRL><S>		Save File
<CTRL><J>		Open Project
<CTRL><P>		Print
<CTRL><X>		Cut Selected Elements
<CTRL><C>		Copy Selected Elements
<CTRL><V>		Paste Selected Elements
<CTRL><Z>		Undo last edit
<CTRL><A>		Select All Elements
<CTRL><F>		Find a Register
<CTRL><H>		Replace a Register
<CTRL><G>		Goto Rung or Line



# INDEX

Boolean		OEM Code .....	5
Elements		Pass-Through Connection .....	5
Toolbar .....	26	Password	
Comments		With OEM Code .....	18
As Documentation .....	5	Remote Text Terminal .....	17
Full or Icon .....	18	Tool Bars	
Configuration		Advanced Math elements.....	27
OCS Hardware .....	5	Bitwise Elements.....	26
Controller		Boolean Elements.....	26
Configuration.....	5	Controller.....	25
Force Outputs.....	17	Conversion Tools.....	28
Menu.....	16	Data Move Elements.....	26
Remote Text Terminal .....	17	Floating.....	22
Search Network for.....	17	Horizontal .....	22
Set Idle Mode .....	16	Math Elements.....	27
Set Run Mode .....	16	Program Control .....	24
Term Defined .....	3	Security .....	25
Toolbar.....	25	Status Bar.....	29
Upload From .....	15	Vertical .....	22
CSP File		Windows.....	24
New File.....	13	Tools	
Debug.....	5	And Associated Hot Keys.....	30
Menu.....	16	Check for Errors.....	24
Multiple.....	16	Copy Selected Elements.....	24
Multiple Units.....	6	Cut Selected Elements.....	24
Default Directories .....	9	Data Watch.....	24
Hot Keys.....	30	Debug.....	24
Menus		Download.....	25
Controller .....	16	Find an Element.....	24
Debug .....	16	Log In .....	25
Edit .....	14	Log Out.....	25
Element Handling .....	19	Menu .....	17
File.....	13	New CSP File .....	24
Help .....	18	New Project .....	24
Program .....	15	Open Existing CSP File.....	24
Screen.....	17	Paste From Clipboard .....	24
Tools.....	17	Save CSP File .....	24
View.....	18	Set DO I/O Mode .....	25
Window .....	18	Set Idle Mode.....	25
Mouse Movement		Set Run Mode.....	25
Double Click.....	4	Set Target ID .....	25
Highlight.....	4	text Screen Editor .....	25
Right Click.....	4	Toolbar Selection Tool .....	22
Single Click .....	4	Upload.....	25
OCS Term Defined .....	3		